

1

**PRINT OUT TEMPLATE
ENSURING TO SET
PRINTER TO "SCALE -
ACTUAL SIZE".**

2


**CUT OUT THE
CLEARVIEW TEMPLATE
(OUTSIDE OF THE BLUE
OUTLINE.).**

3

**PLACE ON THE SCREEN
WHERE REQUIRED TO
CHECK THE FIT OF THE
SCREEN PROTECTOR.**

4

**IF THE TEMPLATE FITS,
HEAD OVER TO
WWW.HEATEDVISOR.CO.UK
OR
WWW.HEATEDVISOR.COM
AND PURCHASE YOUR VISIN
CLEARVIEW.**

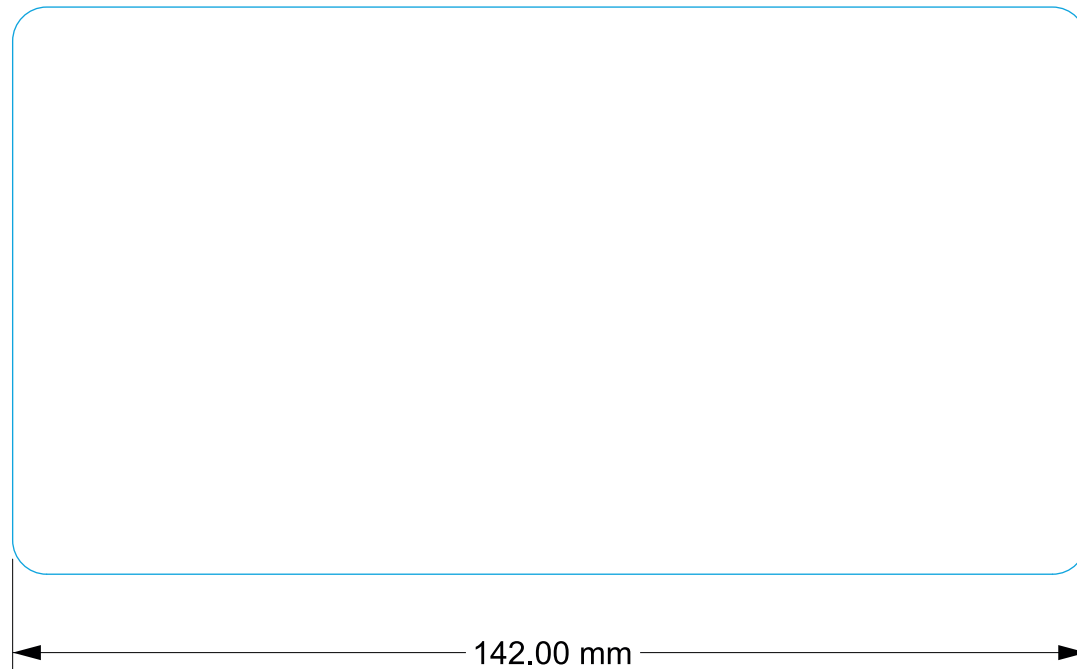

BMW Connected Ride

